



MANUAL FOR MODULAR, NX SERIES AND PRO SERIES HEADSETS

# ASSAULT TACTICAL THROAT MIC



## INDEX



WEARING THE HEADSET / 02

CONNECTING HEADSET TO PTT / 03-05

 
USING THE PTT / 06

TROUBLESHOOTING / 06

CLEANING YOUR HEADSET / 07

WARRANTY/ 07

## WEARING THE HEADSET

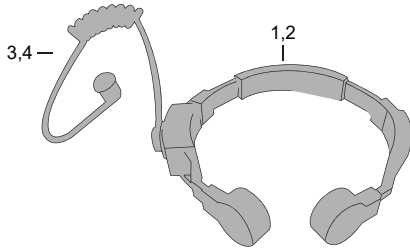

- 1 To mount the throat mic gently spread the neckband, mount from behind the neck, and place the mics toward the front of the neck. Position microphone transducers as close to vocal cords as possible. Position microphones so the best transmission is achieved.
- 2 The neckband can be adjusted by pulling gently on the neckband to expand the size. The neckband will accommodate neck sizes 13" to 19".
- 3 The earpiece can be worn on either ear by simply turning the throat microphone over.
- 4 Place the earbud into the ear with the clear tube earpiece going behind the ear and up and over for a secure fit. Angle barb fitting can be rotated to eliminate any stress on-ear.

## CONNECTING HEADSET TO PTT

 
 
### MODULAR SERIES:

Modular Series PTT's and Mod PTT Bypass use a 5-pin DIN connection. The connector cord and the push to talk module have male/female quick disconnect ports that need to be carefully lined up before being attached.


DO NOT force the quick release connectors together as you may damage the pins. Use light force and twist until you find the sweet spot.

### NEXUS SERIES:


Nexus Series PTT's use a US Nato Standard TP-120/U-174 connection. Firmly insert the male connector into the female receptacle. To remove, twist, and pull on male connector plastic cover-do not pull wires.

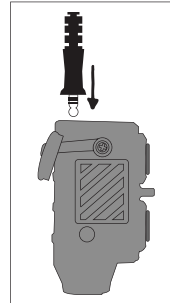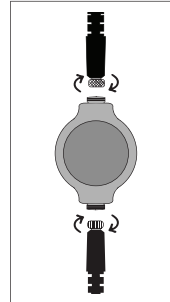

 If waterproof connection is difficult to separate, use a small flat blade screwdriver to peel back the seal and pop the male connector out.

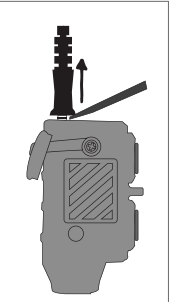

 The Molle clip can be reversed to be used on left or right side of vest. Remove the screws using a phillips screwdriver and install the clip on the other side. You will need to insert the cap latch to the opposite side. Reinsert rubber screw covers.

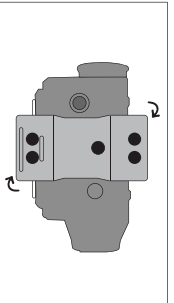

## CLEANING YOUR HEADSET

- To ensure the life of the Assault microphone, wipe it clean after every use. Do not use soap or cleaning chemicals.

- To clean a clogged acoustic tube simply remove the acoustic tube and soak it in a glass of warm water (not hot) for 10 minutes. Use a compressed air can to dry and blow out any additional debris and water from the tube. Replace the tube as necessary.

## WARRANTY

### One Year Limited Warranty Information:

Please contact Code Red Headsets if you have any issues. Email us at [shipping@codereadheadsets.com](mailto:shipping@codereadheadsets.com). You must request an RMA number from [www.codereadheadsets.com/returns.asp](http://www.codereadheadsets.com/returns.asp) to initiate the returns/repair process.

## TROUBLESHOOTING

- Test headset on another radio to verify it is the headset that is the issue.
  - Make sure the radio is fully charged.
  - Verify acoustic tube is clear of debris: remove earbud, blow compressed air from the headset, remove the acoustic tube through the tube. Reassemble and test.
  - Press PTT and PTT on radio to test transmission.
- Attach the radio connector to the radio according to manufacturers' instructions.
- SLOWLY turn the volume up to a comfortable level.
- To transmit, depress the PTT in the center spot of the PTT button. The heavy-duty switch clip can be attached to your clothing or easily fed through a vest or Molle system.

PRO SERIES: Pro Series PTT's use a US Nato Standard TP-120/U-174 connection. Connect the headset connector on the PTT. Firmly insert the male connector into the female receptacle. To remove, twist, and pull on male connector plastic cover. Do not pull wires.

