

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting.

### RF Exposure Warning!


Please keep product 20cm away from your body or bystander during the radio operation. The typical handheld two-way radios were certified under mobile usage condition (i.e. keep 20cm away from the user body) and use of such radio closer than 20cm may exceed the US RF exposure limit and shall be avoided.

Version 2.0 November 2018

codeRED Headsets  
www.coderedheadsets.com

2

## Controls and Connections

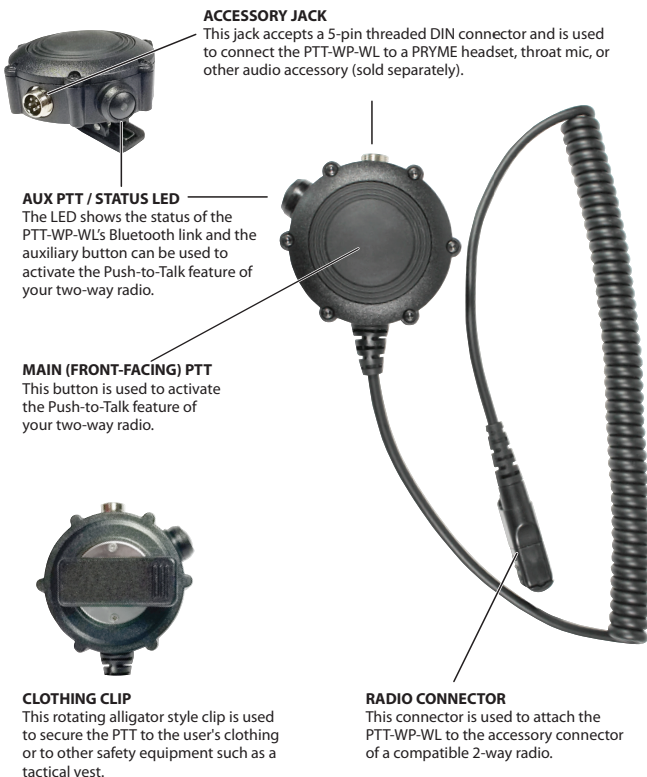

3



## BlueLink PTT-WP-WL

### Waterproof Tactical Push-to-Talk Button With Wireless Bluetooth User's Guide



## Setting up the PTT-WP-WL for Operation

### CONNECTING A WIRED HEADSET



The PTT-WP-WL requires a compatible wired headset or other audio accessory (sold separately). To attach the headset, insert the 5-pin DIN connector of the headset or other audio accessory into the jack on the PTT-WP-WL. Then tighten the threaded ring to secure the connector into place.

codeRED sells a wide variety of compatible audio accessories for different environments and applications.

### CONNECTING TO A TWO-WAY RADIO

Always make sure that the radio is turned off before connecting or disconnecting the PTT-WP-WL.

Connect the PTT-WP-WL to the radio by attaching the radio connector to the accessory jack on the radio. On some two-way radios, there may be a latch or one or more screws that need to be tightened to secure the connector in place.

4

## PAIRING A BLUETOOTH PTT BUTTON (OPTIONAL)

The wireless PTT function of the PTT-WP-WL requires a compatible BlueLink BTLE (Bluetooth Low Energy) PTT button (sold separately). Prior to use, the BTLE PTT button must be paired to the PTT-WP-WL. This pairing process needs to be done only once as long as the same PTT button and PTT-WP-WL are used together. Once paired, the devices will remember each other and will reconnect to each other whenever they are both powered on and within range.

To pair the devices do the following:

1. Power off the two-way radio that the PTT-WP-WL is attached to.
2. Press and hold the Main (front-facing) PTT button on the PTT-WP-WL.
3. Power on the two-way radio. Continue to hold the Main PTT button.
4. After 5 seconds, release the Main PTT button. (Note that on some radios, such as Motorola TRBO models, you will need to wait 5 seconds after the radio sounds its "power on" tone.)
5. The LED on the PTT-WP-WL will now flash two times every second. This indicates that the PTT-WP-WL is in pairing mode and can be connected to a compatible Push-to-Talk.
6. Make sure that the wireless PTT button is powered on. Press and release the wireless PTT button 2-3 times.

The wireless PTT button and PTT-WP-WL should now be paired to each other and ready for use.

Note: The Bluetooth feature of the PTT-WP-WL-PTT is powered by the attached two-way radio. The PTT-WP-WL does not use a battery and does not require recharging.

## NORMAL OPERATION

When operating using the PTT-WP-WL, the following applies:

- Received signals will be heard through the speaker or earphone of the audio accessory that is connected to the PTT-WP-WL. The volume level is controlled by the attached two-way radio's volume knob.
- To cause the attached 2-way radio to transmit you can press and hold any of the following PTT buttons:
  1. The Main PTT button on the PTT-WP-WL
  2. The Aux PTT button on the PTT-WP-WL
  3. The PTT button on the optional BlueLink Wireless PTT button, if one is paired to the PTT-WP-WL
- When transmitting, audio is taken from the microphone of the audio accessory that is connected to the PTT-WP-WL.



## STATUS LED MESSAGES

The LED indicator on the PTT-WP-WL shows various different messages depending on the status of the device. Refer to the following table for more information:

LED INDICATION	MEANING
No flash	Radio powered off
one flash / second	Normal operation
two flashes per second	PTT-WP-WL is in pairing mode

6


## REPLACING THE WIRELESS FINGER PTT BATTERY (IF NEEDED)

The Wireless Finger PTT uses one replaceable CR2032 coin cell type battery. The first time you use your Wireless PTT, you will need to install a new battery. You will also need to replace the battery at the end of its lifetime. A single battery can provide up to one full year of operating time. However, operating time can vary depending on usage cycle and the age and condition of the battery.



### To change the battery:

1. Separate the two halves of the Wireless Finger PTT housing by securely holding the back cover and rotating the front cover in a counter-clockwise direction until the two halves come apart.
2. Locate the battery holder inside of the device. Remove the old battery from the battery holder if one is installed. A ball point pen can be used to push the battery out of the holder if needed.
3. Insert a new CR2032 3-volt coin cell battery into the battery holder, observing proper polarity. The positive side of the battery (marked with a "+" sign) should face away from the circuit board.
4. Reinsert the two halves of the transmitter housing and rotate the top cover clockwise to tighten.

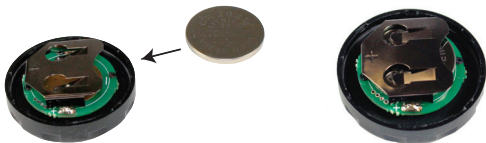

7

## SUPPORT AND WARRANTY

codeRED Headsets warrants this product against defects in materials or workmanship for a period of one year from the date of retail purchase. codeRED Headsets will repair or replace a defective unit, at our option, without charge for parts or labor. The limited warranty is extended only to the original purchaser and is valid only to consumers in the United States and Canada. It does not cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning, or other incidences of excessive voltage, or any tampering or repairs by other than a codeRED Headsets authorized repair facility. It does not cover replacement of consumable parts, transportation costs, or damage in transit.

Repair or replacement under the terms of this warranty does not extend the terms of this warranty. This warranty can only be modified by an officer of codeRED Headsets, and then only in writing. Should this product prove defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as provided by the terms of this warranty. Under no circumstances shall codeRED Headsets be liable for any loss or damage, direct, consequential, or incidental, arising out of the use of or inability to use this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusions or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which may vary, from state to state.

For support or warranty service on your codeRED Headsets product, contact us at 858-486-9859 or visit us on the web at [www.coderedheadsets.com](http://www.coderedheadsets.com).

DISCLAIMER: The Bluetooth wireless link used by BlueLink products is an open standard, unsecured technology. As such, it is not recommended for first-responder or other mission critical users.

8