



INSTRUCTIONS – codeRED Moto Helmet Headset Installation





1. INSTALLATION

Speaker and Microphone Installation.

- b. Remove ear padding from each side of helmet interior.
- c. Place adhesive Velcro pad for speaker so it is located where ears will be when helmet is strapped on.
- d. Install Microphone Velcro Pad so mic is positioned in front of mouth when helmet is strapped on.
- e. Replace ear padding and test out function of speakers and microphone.
- f. Run wires as suitable behind helmet and tuck between helmet insulation material and shell. Use tape as necessary to secure wiring.
- g. Secure cable harness at wire junction to reduce stress on speaker and microphone wires. (see picture)
- h. Allow connector to hang freely so unit can easily be plugged into radio/phone connection harness.




NOTE: Install Speaker and Microphone Velcro pads in this approximate location.




NOTE: Secure wire junction with zip tie to reduce stress on speaker/microphone wires.

2. CONFIGURATIONS:

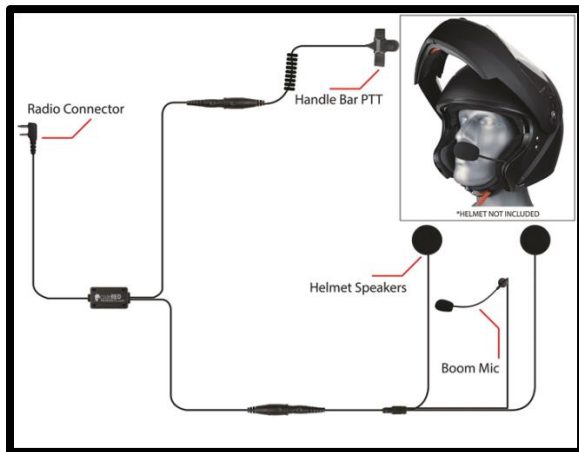

2-Way radio Installation

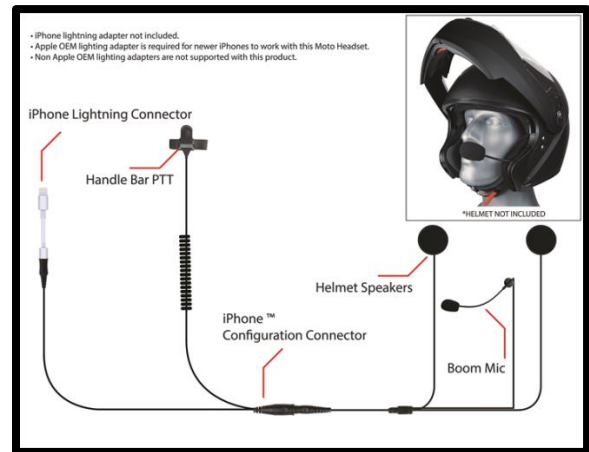

iPhone Installation